mpman

For Series
TS200
Video & MP3 Player

Instruction Manual

Please read this instruction carefully before the operation.

Table of Contents

THANK YOU **5**
Package Contents 5
Features 5

CONTROLS AT A GLANCE **6**

GETTING STARTED **7**
Charging the Battery 7
Charging with a Computer 7
Turning the Player On/Off 7
Resetting the Player 8
Disabling the Controls (Hold) 8

MAIN MENU **9**
Main Menu Controls 9

MUSIC MODE **10**
Music Browser Controls 10
Using the Quick Play List 11
Now Playing Controls (Music Playback) 11
Quick Option Menu 12

PHOTO MODE **14**
Photo Browser Controls 14
Photo Viewer Controls 15

VIDEO MODE **16**
Movie Browser Controls 16
Movie Playback Controls 17

RADIO MODE **18**
Radio Tuning Controls 18
Quick Option Menu 19

TEXT MODE **20**
Text Browser Controls 20
Text Reader Controls 20
Quick Option Menu 20

EXPLORER MODE **22**
Explorer Controls 22

SETTING MODE **23**

MPMANAGER **25**

TRANSFERRING FILES TO YOUR PLAYER **26**

SPECIFICATIONS **29**

TROUBLESHOOTING & SUPPORT **30**

Thank You

Congratulations on your purchase of the Video & MP3 player. This manual is designed to help you easily set up and begin using your new player right away. Please read this manual carefully and retain it for future reference.

Package Contents

Please make sure that the items shown below are included in the package. Should an item be missing, please contact the local retailer from which you purchased this product.

- Video & MP3 player
- USB Cable
- Instruction Manual & Documentation
- Professional Stereo Earphones

This package may contain plastic bags or other materials that pose a hazard to children. Be sure to safely dispose of all packing materials after opening.

Features

- Integrated flash memory
- Full-color LCD display
- Plays music, video, photos and text
- ID3 and LRC support for song and synchronized lyric information display
- Integrated FM Radio
- USB 2.0 Hi-speed for fast file transfers

Controls at a Glance

Top View	
1. Enter/Power button *Press to confirm a selection; Press and hold to Power On/ Off the player.*	<ENTER>
Side View	
2. Up Button	<UP>
3. Down Button	<DOWN>
Front View	
4. LCD touchscreen *Tap the display with your finger to activate the on-screen control.*	
5. Option button	<OPTION>
Bottom View	
6. USB Port/Charge	
7. 3.5mm Headphone Jack	
Rear View	
8. Reset Button	<RESET>

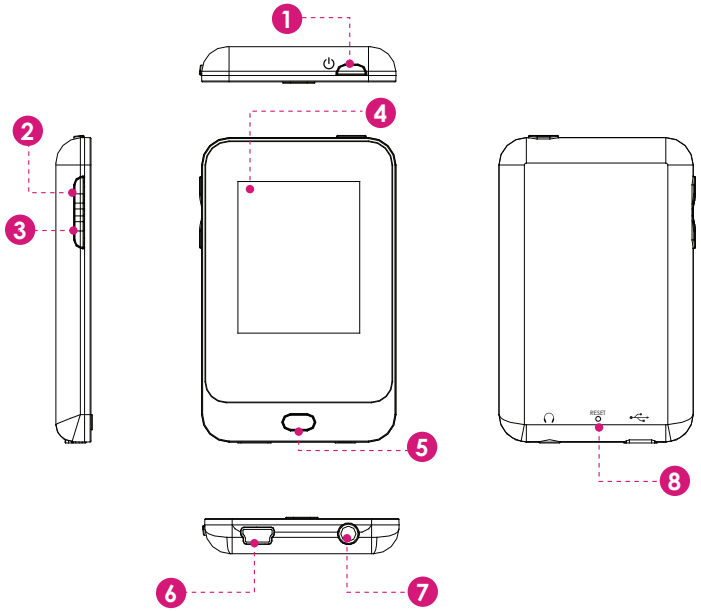

Getting Started

Charging the Battery

Your player has an integrated rechargeable battery. Upon initial use, the battery should be charged fully to ensure optimal performance and battery life.

If the player has not been used in a while, the battery may need to be recharged overnight (about 8 hours).

The battery used in this device may present a fire or chemical burn if mistreated. Do not disassemble, incinerate, or heat the battery. Do not leave the battery in a place subject to direct sunlight, or in a car with its windows closed.

Do not connect the player to a power source other than that which is indicated here or on the label as this may result in the risk of fire or electric shock.

Charging with a Computer

Your player can be charged through a USB computer connection. Use the supplied USB cable to connect the player to a high-power USB port of a computer. The computer must be powered on and not in sleep mode.

When the player is connected and charging, a USB symbol will be displayed on the player's screen.

Turning the Player On/Off

- To turn the player on, press and hold the <ENTER> button until the screen turns on.
- To turn the player off, press and hold the <ENTER> button until the screen turns off.

Resetting the Player

Reset the player if it should freeze and not respond or otherwise malfunction.

1. Disconnect your player if it is connected to a computer.
2. Use a paper clip to gently press the <RESET> button located on the bottom of the player.

Using the Touchscreen Controls

Your video MP3 player comes equipped with an easy-to-use touchscreen which allows access to the player's functions. Use your finger tip or a stylus to tap the area of the screen where a control icon is displayed. If you tap and hold an icon, it will register as a continuous button press.

To avoid damaging the screen, do not touch it with excessive force or with any object other than your finger or the stylus. For best response, make sure your hands are clean before using the touchscreen controls.

Main Menu

When you turn on the player, you will see the Main menu. The Main menu gives you access to the different function modes of your player. These modes are:

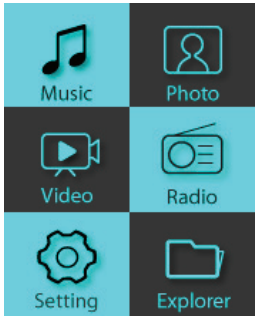

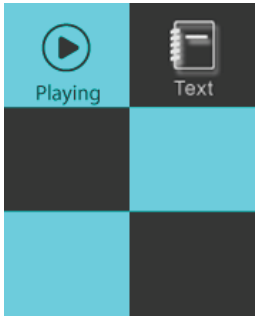

Music: Browse and play music.

Photo: Browse and view Photo.

Video: Browse and play Video.

Radio: Listen to FM radio broadcasts.

Setting: Adjust the player's options.

Explorer: Browse all files.

Playing: Return to the Now Playing screen.

Text: Browse and read text files.

Main Menu Controls

Each function mode is represented by an icon on the Main Menu screen.

- To enter a mode, tap the icon with your finger.
- To scroll the screen and display other menus, slide your finger on the screen left or right.

You may also use the player's standard controls to access each mode:

- To browse through the different modes, press <UP> or <DOWN>.
- To select a mode, press the <ENTER> button.

Music Mode

Browse for and play your music files.

Music Browser Controls

When you choose MUSIC mode from the Main menu, you will see the Music Browser screen. You can choose to browse your music by song name, album, artist, or genre, or you may choose "Explorer" to view the music files and folders on the player.

Function	Key Action
To browse through the list	Press <UP> or <DOWN>
To select an item	Press <ENTER>, or tap the desired selection on the LCD screen.
To return to the previous screen	Press <OPTION>

If your music files contain ID3 song information tags, you will be able to view your tracks by Artist, Album, or Genre. To view all files (including those that do not contain ID3 information), select "Explorer" option.

If music is already playing, you will have the additional option to return to the Now Playing screen.

Now Playing Controls (Music Playback)

To start playing music, browse for a song and then tap the song title to start playback, or you can press <ENTER> to start playback.

When a song is playing, the Now Playing screen appears (see below).

The following functions may be performed from the Now Playing screen.

Function	Key Action
To play the next track	Tap < ▶▶| > on screen
To play the previous track	Tap < |◀◀ > on screen
To pause/resume playback	Press <ENTER>, or tap < ▶ >on screen
To forward-scan quickly through the current track	Hold < UP >
To reserve-scan quickly through the current track	Hold < DOWN >
To add the current song to the Favourite list	Tap < ♡ > on screen
Play all tracks in Normal order	Tap < 🔁 > on screen
Play all tracks in Random order	Tap < 🔀 > on screen
To adjust the volume level	Press <UP> or <DOWN>
To back to the Music Browser screen	Press <OPTION>
To return to the Main menu	Hold on screen anywhere

Play your favorite songs

To access the Favorites list, tap FAVORITES from the Music Browser screen.

- To browse through the list, press <UP> or <DOWN>
- To select an item, press <ENTER> or tap the selection directly.
- To return to the previous screen, press <OPTION>.

Photo Mode

Browse for and view your photo files.

For more information about how to get photos onto your player, please refer to the section "Transferring files to your player".

Photo Browser Controls

When you choose Photo mode from the Main menu, you will see the Photo Browser screen. Your Photo will be displayed as thumbnail images.

Use the Photo Browser to find all Photo files loaded on your player.

Function	Key Action
To browse through the Photos	Press <UP> or <DOWN>, or slide your finger on screen up or down.
To select/view an item	Press <ENTER> or tap the desired selection directly.
To return to the Main menu	Press <OPTION> or hold on screen

Quick Option Menu

To access the quick option menu, press and hold <OPTION> on the Photo Browser screen.

- To browse through the settings, press <UP> or <DOWN>.
- To select a setting, press <ENTER> or tap the selection directly.

Local folder

Browse all photo files that located on your player.

Playback set

Set the Play mode as Manual play or Auto play.

- ✧ After confirmed Auto play, select the amount of time between pictures during atuo play mode(in seconds).

Exit

Select to exit the Quick Option menu and return to the Photo Browser screen.

Photo Viewer Controls

The following functions may be performed from the Photo Viewer screen.

Function	Key Action
To view the next Photo (Manual play mode only)	Press <UP>, or slide your finger down on screen .
To view the previous Photo (Manual play mode only)	Press <DOWN>, or slide your finger up on screen.
To back to the Photo Browser screen	Press <OPTION>
To return to the Main menu	Hold on screen

Video Mode

Browse for and play your movie files.

Your player supports AMV files. Videos may need to be encoded with the included software for device playback.

For more information about converting video, please refer to the section "Video Conversion".

Movie Browser Controls

When you choose Video mode from the Main menu, you will see the Movie Browser screen.

Use the Movie Browser to find all movie files loaded on your player.

Function	Key Action
To browse through the list of movie files & folders	Press <UP> or <DOWN>, or slide you finger on screen up or down.
To select an item	Press <ENTER> or tap the desired selection directly.
To return to the previous screen	Press <OPTION>
To return to the Main menu	Hold on screen

Movie Playback Controls

Select an item and then press <ENTER> or tap < ▶ > on screen to start the playback.

The following functions may be performed from the Now Playing screen.

Function	Key Action
To play the next movie	Tap < ▶▶▌ > on screen
To play the previous movie	Tap < ▐◀◀ > on screen
To forward-scan quickly through the current movie	Hold <DOWN>
To reverse-scan quickly through the current movie	Hold <UP>
To pause the playback	Press <ENTER> or tap the screen once.
To resume the playback	Press <ENTER> again, or tap < ▶ > on screen
To adjust the volume level	Press <UP> or <DOWN>
To return to the Movie Browser screen	Press <OPTION>
To return to the Main menu	Hold on screen

Press <UP> or <DOWN> to select the previous or next movie while the movie pause mode.

Quick Option Menu

To access the quick option menu, press <OPTION> on the movie pause screen.

- To browse through the settings, press <UP> or <DOWN>.
- To select a setting, press <ENTER> or tap the selection directly.
- To exit the menu, press <ESC>

Local folder

Browse all movie files that located on your player.

Repeat

Change the repeat options to adjust the order in which tracks are played.

Item	Description
Normal	Play tracks in normal order and no repeat.
Repeat One	Play the current track repeatedly.
Folder	Play all tracks in the current folder.
Repeat folder	Repeat all tracks in the current folder.
Repeat All	Play all tracks repeatedly.
Random	Play all tracks in random order.
Intro	Play the first 10 seconds of each track.

Exit

Select to exit the Quick Option menu.

Radio Mode

Listen to FM radio broadcasts.

You must have a pair of headphones connected to the headphone jack to receive FM broadcasts; your player will utilize the headphone cord as an antenna.

Radio Tuning Controls

When you choose RADIO from the Main menu, you will see the Radio Tuning screen. You can search for stations, tune to stations manually, or tune to preset stations.

You must have saved preset stations prior to using preset tuning mode.

The following functions may be performed from the Radio Tuning screen.

Function	Key Action
To toggle between Manual and Preset tunning	Tap < ▶ > on screen
To tune to a higher station	Tap < ▶▶| > on screen
To tune to a lower station	Tap < |◀◀ > on screen
To access the Quick Option menu	Hold <OPTION>
To adjust the volume level	Press <UP> or <DOWN>
To mute the volume	Press <ENTER>
To return to the Main menu	Press <OPTION> or hold on screen

Quick Option Menu

To access the quick option menu, press and hold <OPTION> on the Radio screen.

- To browse through the settings, press <UP> or <DOWN>
- To select a setting, press <ENTER> or tap the selection directly.
- To return to the Radio screen, press <OPTION>

Auto scan

Scan for all stations in broadcast reception range. The player will automatically seek and save all frequencies with a broadcast signal to the Preset Station list.

The auto scan feature will overwrite any previously stored Preset Stations.

Preset List

Display all preset stations.

- To browse through the list, press <UP> or <DOWN>, or slide your finger on screen up or down.
- To confirm a selection, press <ENTER> or tap the desired selection directly.
- To delete a selection, hold <OPTION>.
- To return to the Radio screen, press <OPTION>.

Region

Set the FM frequency range area (USA, Europe, Japan).

Mode

Set the FM Tuning mode to Manual or Preset.

Text Mode

Read .TXT files loaded on your player.

Text Browser Controls

When you choose Text from the Main menu, you will see the Text Browser Screen.

Use the Text Browser to find all text files loaded on your player.

Function	Key Action
To browse through the list of text files	Press <UP> or <DOWN>, or slide your finger on screen up or down
To select/view an item	Press <ENTER> or tap the desired selection directly
To return to the previous screen	Press <OPTION>

Quick Option Menu

To access the quick option menu, press and hold <OPTION> on the Text Browser screen.

- To browse through the settings, press <UP> or <DOWN>.
- To select a setting, press <ENTER> or tap the selection directly.
- To exit the menu, press <OPTION>

Local folder

Browse all text files that located on your player.

Playback set

Set the Play mode as Manual play or Auto play.

- ✧ After confirmed Auto play, select the amount of time between pages during atuo play mode(in seconds).

Exit

Select to exit the Quick Option menu and return to the Text Browser screen.

Text Reader Controls

The following functions may be performed from the Text Display screen.

Function	Key Action
To read the next page	Press <DOWN> or slide your finger on screen down
To read the previous page	Press <UP> or slide your finger on screen up
To access the Bookmark Option menu	Hold <OPTION>
To return to the Text Browser screen	Press <OPTION>
To return to the Main menu	Hold on screen

Bookmark Option Menu

Press and hold <OPTION> to access the Bookmark Option menu.

Bookmark select

Open (go to) a saved bookmark.

The player will display all saved bookmark(s).

- To browse through the list, press <UP> or <DOWN>.
- To select a bookmark, press <ENTER> or tap the selection directly.

Bookmark delete

Delete bookmark(s) from the bookmark list.

- To browse through the list, press <UP> or <DOWN>.
- To delete the selection, press <OPTION>.

Bookmark add

Add the current page as a bookmark.

Exit

Select to exit the Bookmark Option menu and return to the Text Display screen.

Explorer Mode

Enter Explorer mode to view and delete folders and files loaded on your player.

To enter Explorer mode, select and confirm EXPLORER from the Main Menu.

- Select “Local folder” to display all files folders that located on your player.
- Select “Exit” to return to the Main Menu.

If a compatible file is selected and confirmed, the file will be played in its corresponding mode.

- Music Mode: MP3, WMA
- Video Mode: AMV
- Photo Mode: JPG, BMP, GIF
- EBook Mode: TXT

Function	Key Action
To browse through the list of files & folders	Press <UP> or <DOWN>, or slide your finger on screen up or down.
To select a file	Press <ENTER> or tap the desired file directly.
To return to the previous screen	Press <OPTION>
To return to the Main menu	Hold on screen

Setting Mode

Enter the Setting mode to set your player's system options.

To enter Setting mode, select SETTING in the Main menu.

Function	Key Action
To browse through the options	Press <UP> or <DOWN>
To select an item	Press <ENTER> or tap the desired item directly
To cancel and return to the previous screen	Press <OPTION>
To return to the Main menu	Hold on screen

The following options are available. Some of these options may be set from the Quick Option menus.

Item	Description
Display	
Screen Saver	Adjust the duration of time (in seconds) that the backlight will remain on after a key press. A setting of "Off" will keep the backlight on continuously.

Item	Description
Sleep time	Set a sleep timer to turn the player off automatically.
Color Mode	Set the display color as Cyan or Pink.
Language	
--	Set the language that the on-screen menus appear in.
System	
Reset	Restore all of the player's settings to their factory-default state.
Info	View Firmware & Memory Usage information.

MPMANAGER

For movie and music synchronisation and conversion, please use MPMANAGER software supplied in the player.

This software can be used also for UPDATE of your player.

MPMANAGER manual is included in your player.

Transferring Files to Your Player

Connect the player to a computer with the USB 2.0 cable provided to:

- Transfer files to and from your player
- Perform basic file management functions.

Upon connection:

- Your computer will automatically recognize the player as a Removable Disk.
- To open the player to view files, double-click the icon that appears.

Once you have opened the player's folder, simply drag and drop files to the player as you would a floppy disk.

If you need further assistance with transferring files, please refer to your operating system's instruction manual or on-screen help. If you are using media management software such as iTunes, Winamp, or Windows Media Player, please refer to their documentation for support.

Transferring with Microsoft Windows

1. Open a file explorer window. Locate the files you would like to transfer from your computer. Select the files/folders with the mouse and press CTRL-C (copy) on the keyboard.
2. Double-click the "My Computer" icon on your desktop and then double-click the icon that represents your player (e.g., TS200 / Removable Disk). The computer will display all files and folders currently stored in the player.
3. Press CTRL-V (paste) on the keyboard to transfer the files you selected in Step 1 to the player.

Transferring with Macintosh OS X

1. Open a finder window. Locate the files you would like to transfer from your computer. Select the files/folders with the mouse and press APPLE-C (copy) on the keyboard.
2. Click on the Removable Disk icon located on the left side of the finder window. The computer will display all files and folders currently stored in the player.
3. Press APPLE-V (paste) on the keyboard to transfer the files you selected in Step 1 to the player.

Disconnecting from a Computer

To avoid data loss or file/firmware corruption, disconnect the player as instructed below or as by your specific operating system.

Microsoft Windows

1. Double-click the green arrow in the taskbar located on the lower-right side of the computer screen (Safely Remove Hardware).

2. **Safely Remove Hardware:** Select "USB Mass Storage Device" from the list that appears and then click on "Stop".

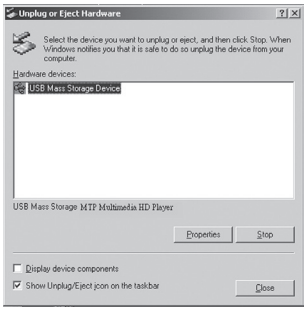
Unplug or Eject Hardware
Select the device you want to unplug or eject, and then click Stop. When Windows notifies you that it is safe to do so unplug the device from your computer.
Hardware devices:
USB Mass Storage Device
USB Mass Storage MTP Multimedia HD Player
Properties
Stop
Display device components
Show Unplug/Eject icon on the taskbar
Close

Stop a Hardware Device: Select "USB Mass Storage Device" from the list that appears and then click on "OK".

3. When the "Safe to Remove Hardware" window appears, click the OK button and disconnect the USB cable from the player and your computer.

Macintosh OS X

1. On the left side of the Finder Window, identify the appropriate Removable Disk icon.

2. Click on the "Eject" arrow on the right of the

Removable Disk icon.

3. Disconnect the USB cable from the player and your computer.

Specifications

Design, specifications, and manual are subject to change without notice.

Display Type	2.0" TFT LCD @ 176x220
Memory	Integrated Flash Memory
Audio Format Support	MP3, WMA
Video Format Support	AMV: 220x176, 25fps
Photo Format Support	JPEG, BMP
Song Info Support	ID3, Windows Media
FM Frequency Range	87.5 - 108.0MHz
PC Interface	USB 2.0 (MSC)
Plug and Play Support	Windows 7/Vista/XP Macintosh OS X
Audio Output	3.5mm Stereo (Headphone)
Power	Rechargeable Li-Poly Battery USB Charge
Play Time	Music: 15 hours*

** Music play time is an estimated value based on playing an MP3 encoded at 128 kbps. Actual play time may vary depending on encoding method used and other factors.*

Troubleshooting & Support

If you have a problem with this device, please check the troubleshooting instruction below. If these resources do not resolve the problem, please contact Technical Support.

The player does not turn on.

- Ensure that the player is fully charged. Try charging the player overnight (8 hours).
- Reset the player (use a paper clip to gently press the Reset button on the bottom of the player) and try again.

The buttons do not work.

- Reset the player (use a paper clip to gently press the Reset button on the bottom of the player) and try again.

I cannot transfer files to the player.

- Ensure that your computer is running a supported operating system.
- Ensure that the player's memory capacity is not full.

There is no sound during playback.

- Check the volume level.
- Ensure that the headphones are attached securely to the player.

The sound quality of the music is poor.

- Try playing the file on your computer. If the sound quality is still poor, try downloading the file again or re-encoding the file yourself.
- Ensure that the bit rate of the file is not too low. The higher the bit rate of the file, the better it will sound. The minimum recommended bitrate is 128kbps for MP3s and 96kbps for WMAs.
- Try lowering the volume of the player.
- Ensure that the headphones are attached securely to the player.

The player will not play my music file.

- Ensure that the file is in a compatible format.
- The file may be copy-protected and you no longer have authorization to play this file. If you feel this is in error, please contact the service from which you downloaded the file.

The LCD characters are corrupted or something is wrong with the display.

- Ensure that the correct menu language has been set.
- Reset the player (use a paper clip to gently press the Reset button on the bottom of the player) and try again.

The player has malfunctioned.

- Reset the player (use a paper clip to gently press the Reset button on the bottom of the player) and try again.

For more information please check our website

www.mpmaneurope.com

A pleine puissance, l'écoute prolongée du baladeur peut endommager l'oreille de l'utilisateur